


Premium Open Arc Wearfacing Wire for Combating Extreme Abrasion

TeroMatec® OA 4601

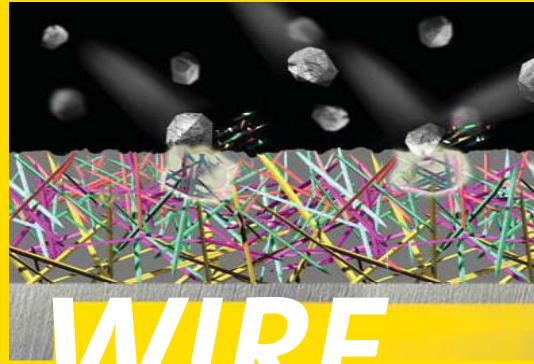

- No shielding gas required, slag-free
- Optimum weld deposit structure for resisting abrasive wear
- Large application spread reduces consumable inventory



DESCRIPTION:

TeroMatec OA 4601 is designed to achieve weld protective coatings on carbon and alloy steels. It is especially suitable for manganese steels as used in the construction and earth-moving industries. Its unique flux core and alloying elements combine with the tubular alloy sheath to produce deposits that have excellent resistance to abrasion, even when service conditions include impact, corrosion and/or elevated temperatures. Deposits polish in service to provide a smooth surface.

TECHNICAL DATA:

Typical Hardness: HRC 55-60 (two passes)
Polarity: DC (+) Electrode Positive
Power Source: Constant voltage and Integrated wire drive

TYPICAL APPLICATIONS & INDUSTRY:

APPLICATIONS

- Crusher Hammer-Breaker Bars
- Secondary Crushers - Chutes
- Earthmoving Equipment
- Bucket Parts
- Conveyor Chains - Crushers
- Conveyor Screws - Mill Augers
- Road Repair Equipment

INDUSTRY

Cement, Disposal
Quarries
Construction
Quarries, Mining
Paper, Cement
Power, Cement
Construction

WELDING PROCEDURE & TECHNIQUE:

Caution: Although a 2-roll wire drive assembly will work the optimum for maintaining arc voltage stability and consistent and smooth wire feeding is a serrated 4-roll drive assembly. Smooth drive rolls are not recommended!

Step 1: Remove all "old" cracked or spalled weld metal down to a sound base.

Step 2: TeroMatec OA 4601 is 2 passes maximum, it is often field practice to deposit a base-coat depending on the type of wear, severity, and the total amount of build-up required.

Note 2: When re-building 12-14% Mn steels use TeroMatec OA 3205 as a cushion layer, and for other alloy steels, EnDOtec DO*685 is recommended. A 2-pass minimum is advised when less-thick deposits are required.

Step 3: Preheat the part to be hardfaced depending on its air hardenability potential and/or carbon level. For most constructional steels a nominal preheat of 150°F is suggested and for medium alloy steels, ~250°F.

Note 3: Do not pre-heat high manganese steels such as Hadfield Castings!

Step 4: After checking that the welding conditions are optimal by testing on scrap metal, position the gun head at a 70-80° angle and use a "push" technique for downhand welding. For fully automated welding such as hardfacing cylindrical parts, the wire should exit at about a 10° lagging angle from top dead center. Using this technique will assure a smooth and regular weld deposit profile with the optimum level of fusion.

Note: If welding is interrupted and the part being welded cools to room temperature, make sure to reheat to the original preheat temperature. For hardenable steels slow cooling is advised using silicone blankets, vermiculite, or other environmentally suitable heat-retardant material.

Step 5: For most applications, other than a superficial grind, finishing is not required. If some level of profiling is needed, grinding can be used for more precise shaping.

OPEN ARC PARAMETERS:

Diameter (in) (mm)	CURRENT RANGE (A)		VOLTAGE RANGE (V)		WIRE EXTENSION (CONTACT TIP)	
	Globular (Large Parts)	Fine Globular (Light Parts)	Globular	Fine Globular	Globular (Short Nozzle)	Fine Globular (Short Nozzle)
0.045" (1.2)	150-210	100-150	23-25	19-24	9/16" ± 1/8"	9/16" ± 1/8"
7/64" (2.8)	300-450	225-320	26-32	23-27	1.25" ± 1/8"	1.25" ± 1/8"

Note: Parameter adjustments will be needed depending on the size, weight, and shape of the part to be welded. For optimum wear resistance keep to the low end of the amperage & voltage ranges

YOUR RESOURCE FOR PROTECTION, REPAIR AND JOINING SOLUTIONS



Eutectic Corporation
N94 W14355 Garwin Mace Drive
Menomonee Falls, WI 53051 USA
P 800-558-8524 • F 262-255-5542
www.eutecticusa.com

Eutectic Canada
428, rue Aime Vincent
Vaudreuil-Dorion, Quebec J7V 5V5
Phone: (800) 361-9439
Fax: (514) 695-8793
www.eutectic-na.com

Eutectic Mexico
KM 36.5 Autopista
Mexico-Quertaro
54730 Cautitlan-Izcalli
Estado de Mexico, Mexico
Phone: 011 (52) 55-5872-1111
e-mail: eutectic@eutectic.com.mx

Statement of Liability: Due to variations inherent in specific applications, the technical information contained herein, including any information as to suggested product applications or results, is presented without representation or warranty, expressed or implied. Without limitation, there are no warranties of merchantability or of fitness for a particular purpose. Each process and application must be fully evaluated by the user in all respects, including suitability, compliance with applicable law and non-infringement of the rights of others, and Eutectic Corporation and its affiliates shall have no liability in respect thereof.

OA4601 02-09-12© 2008, Eutectic Corporation, © Reg. T.M., Printed in the U.S.A.

Part of the Messer World ■■